

Features

- ✧ With “sandwich” structure, it is easy to be installed between DZ-03 base and a detector.
- ✧ Three working modes settable (Mode I, II, III, and the latter two available with pre-alarm state).
- ✧ 16 tones of sound and bright flashing light.
- ✧ Electronically addressed. The address and tones can be modified in field.

Description

I-9406 Addressable Flashing Beacon Base is installed in field to warn people for evacuation with audible and visual alarm in case of a confirmed fire.

The flashing beacon base can communicate with fire alarm control panel (FACP) through a built-in microprocessor. On receiving a start command from the FACP, the microprocessor will control the buzzer to generate the pre-set fire alarm sound and light the bright LED.

Wiring and Connection

Terminals of the flashing beacon base are shown in Fig. 1.

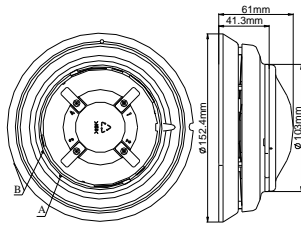


Fig. 1

Z1(1), Z2(3): Signal loop of FACP, polarity-insensitive.

Recommended Wiring

1.0mm² or above fire cable, subject to local codes.

Installation

Warning: Before installing the flashing beacon base, disconnect power from the loop and verify that all the bases are securely fixed and that the wiring is correct on each base.

- 1 Before installation, make sure the enclosure is free from scratch or distortion, and labels are complete.
- 2 Installation schematic of the flashing beacon base is shown in Fig. 2.
- 3 Secure the detector base (Fig. 4) with 2 tapping screws, and wire them properly. Align the orientation mark B on the flashing beacon base to mark C of detector base, and rotate the flashing beacon base clockwise to D. Refer to Fig. 3 and 4.
- 4 If the flashing beacon base comes with a cover, align the orientation mark on the cover to mark A of the flashing beacon base (Fig.1), and rotate the cover clockwise to B. If it's used as detector base, remove the cover and install the detector on it with the same method.

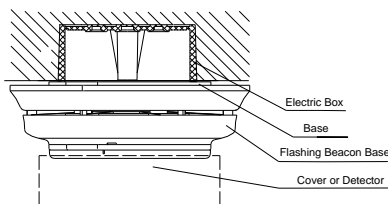


Fig. 2

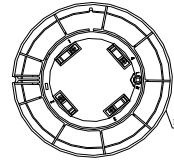


Fig. 3

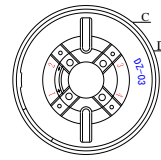


Fig. 4

Application

The flashing beacon base can be used as the base of intelligent heat and smoke detectors to combine detection and alarm in a single device. It can be connected to the loop of FACP without additional power supply.

Working Mode Setup and Tone Selection

The flashing beacon base has three working modes. The factory default is tone 14, mode I.

The flashing beacon base has 16 tones, the setup of which also decides the setup of working modes.

- If the flashing beacon base is set with one of the tones from No. 1 to 16, it works in Mode I.
- If it is set with one of the tones from No. 17 to 32, it works in Mode II.
- If it is set with one of the tones from No. 33 to 48, it works in Mode III.
- Tone 1~16, 17~32 and tone 33~48 are completely the same by one-to-one correspondence, with the only difference that they work in different modes. Please refer to the table of tones.

Working Modes:

Mode	Address	Type of fire alarm
I	Single address, occupying one loop point	Standalone. The beacon base gives alarm signal when started.
II	Dual addresses, sharing high address with detector	The beacon base gives pre-alarm signal when starting the higher address and alarm signal when starting the lower address.
III	Occupying dual addresses individually	The beacon base gives pre-alarm signal when starting the lower address and alarm signal when starting the higher address.

Operation

The address, working mode and tone of the flashing beacon base can be programmed using P-9910B programmer in field.

✧ Address Programming

Connect the programmer with Terminal 1 and 3 of the flashing beacon base. Turn on the programmer, enter the address code (1 to 242), pressing *Program*, the screen will show a “P” meaning the address is programmed. Refer to *P-9910B Hand Held Programmer Installation and Operation Manual* for details.

✧ Setting Tone and Working Mode

In standby state of the programmer, entering number 4, 5 and 6 followed by *Clear*, the screen will show "0". Pressing *Function*, the screen still shows "0". Pressing "3" then, the screen shows "-". Entering the tone number, and pressing *Program*, "P" will show on the screen, meaning the tone number has been set. Pressing *Clear*, the screen shows "0", further operation can be done. If the tone number falls into the range of 1 to 16, the flashing beacon base works in Mode I; if the number falls into the range of 17 to 32, it works in Mode II; if the number falls into the range of 33-48, it works in Mode III. Numbers outside these three ranges will not be accepted, in which case, the number will be defaulted to be "46".

Application Method

- The flashing beacon base can be used as a detector base to mount intelligent detectors, so that the detector can carry out both fire detection and alarm.
- It can also be directly connected into fire alarm system. In case of a fire alarm, it will generate the pre-set alarm sound.

Caution:

- Please read this manual carefully before operation.
- DZ-03 base should be used together with this product.
- A loop can have maximum 30 flashing beacon bases due to their current consumption.
- Please order the special top cover if it's not connected with fire detector.
- Never try to repair it by yourself. Always contact your distributor in case of any trouble.

Specifications

Operating Voltage	Loop 24V (16V~28V)
Quiescent Current	≤1mA
Alarm Current	≤6mA
Sound Level	Refer to the table (1m ahead horizontally (A weighted))
Mode	Mode I, II & III.
Alarm tones	Optional 16 tones. Please refer to the table of tones.
Flash indication	Bright red flash, frequency 1Hz
Programming	Electronically programmed
Code Range	1~242
Ingress Protection Rating	IP21
Operating Temperature	-10℃~+50℃
Relative Humidity	≤95%, non condensing
Material of Enclosure	ABS
Dimension	Diameter: 152.4mm Height: 41.3mm (without cover)
Mounting hole distance	45mm~80mm
Weight	About 233.9g

Accessories and Tools

Model	Name	Remark
P-9910B	Hand Held Programmer	Order separately

Limited Warranty

GST warrants that the product will be free from defects in design, materials and workmanship during the warranty period. This warranty shall not apply to any product that is found to have been improperly installed or used in any way not in accordance with the instructions supplied with the product. Anybody, including the agents, distributors or employees, is not in the position to amend the contents of this warranty. Please contact your local distributor for products not covered by this warranty.

Appendix Table of Tones

Mode			Tone Description	Sound Level @ 1m dBA
I	II	III		
1	17	33	970Hz	85
2	18	34	800Hz /970Hz @ 2Hz	88
3	19	35	800Hz-970Hz@1Hz	86
4	20	36	970Hz 1s on /1s off	86
5	21	37	970Hz, 0.5s/630Hz, 0.5s	86
6	22	38	500Hz - 1200Hz 0.5s onx3 / 1.5s off	85
7	23	39	2850Hz, 0.5s on/0.5s off ×3/1.5s off	86
8	24	40	2850Hz 0.4s on/0.3s off	87
9	25	41	550Hz,0.7s/1000Hz, 0.33s	92
10	26	42	1500Hz -2700Hz @3Hz	80
11	27	43	2400Hz	79
12	28	44	500Hz -1200Hz @0.33Hz	85
13	29	45	2400Hz -2900Hz @9Hz	84
14	30	46	2400Hz -2900Hz @3Hz	92
15	31	47	800Hz-970Hz@3Hz	86
16	32	48	500Hz-1200Hz,3.75s on /0.25s off	85
Pre-alarm			800Hz 1s on/1s off	80

This Data Sheet is subject to change without notice. Please contact GST for more information or questions.

Gulf Security Technology Co., Ltd.

No. 80, Changjiang East Road, QETDZ, Qinhuangdao, Hebei, P. R. China 066004

Tel: +86 (0) 335 8502434 Fax: +86 (0) 335 8502532

service.gst@fs.utc.com www.gst.com.cn